YAMAHA

YDS-12

Universal Dock for iPod
Dock Universal pour iPod
iPod 用ユニバーサルドック

OWNER'S MANUAL
MODE D'EMPLOI
BEDIENUNGSANLEITUNG
BRUKSANVISNING
MANUALE DI ISTRUZIONI
MANUAL DE INSTRUCCIONES
GEBRUIKSAANWIJZING
ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ
使用说明书
사용 설명서
取扱説明書

English
Français
Deutsch
Svenska
Italiano
Español
Nederlands
Русский
中文
한국어
日本語

Made for iPod

Works with iPhone

FCC INFORMATION (for US customers only)

1. **IMPORTANT NOTICE : DO NOT MODIFY THIS UNIT!**
   This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.
2. **IMPORTANT :** When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.
3. **NOTE :** This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices.

This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices.

Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Electronics Corp., USA 6660 Orangethorpe Ave., Buena Park, CA 90620.

The above statements apply ONLY to those products distributed by Yamaha Corporation of America or its subsidiaries.

COMPLIANCE INFORMATION STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1) This device may not cause harmful interface, and
2) This device must accept any interference received including interference that may cause undesired operation of this device.

See user manual instructions if interference to radio reception is suspected.

Informations de la FCC (Pour les clients résidents aux États-Unis)

1. **AVIS IMPORTANT: NE PAS APPORTER DE MOFIDICATIONS À CET APPAREIL !**
   Ce produit est conforme aux exigences de la FCC s'il est installé selon les instructions du mode d'emploi. Toute modification non approuvée expressément par Yamaha peut invalider l'autorisation, accordée par la FCC, d'utiliser ce produit.
2. **IMPORTANT:** N'utiliser que des câbles blindés de haute qualité pour le raccordement de ce produit à des accessoires et/ou à un autre produit. Seuls le ou les câbles fournis avec le produit DOIVENT être utilisés. Suivre les instructions concernant l'installation. Le non respect des instructions peut invalider l'autorisation, accordée par la FCC, d'utiliser ce produit aux États-Unis.
3. **REMARQUE:** Ce produit a été testé et déclaré conforme aux normes relatives aux appareils numériques de Classe "B", telles que fixées dans l'Article 15 de la Réglementation FCC. Ces normes sont destinées à assurer une protection suffisante contre les interférences nuisibles avec d'autres appareils électroniques dans une installation résidentielle.

Cet équipement génère et utilise des fréquences radio qui, en cas d'installation et d'utilisation non conformes aux instructions du mode d'emploi, peuvent être à l'origine d'interférences empêchant d'autres appareils de fonctionner.

Cependant, la conformité à la Réglementation FCC ne garantit pas l'absence d'interférences dans une installation particulière. Si ce produit devait produire des interférences, ce qui peut être déterminé en "ÉTEIGNANT" et en "RALLUMANT" le produit, l'utilisateur est invité à essayer de corriger le problème d'une des manières suivantes :

Réorienter ce produit ou le dispositif affecté par les interférences.

Utiliser des prises d'alimentation branchées sur différents circuits (avec interrupteur de circuit ou fusible) ou installer un ou des filtres pour ligne secteur.

Dans le cas d'interférences radio ou TV, changer de place l'antenne et la réorienter. Si l'antenne est un conducteur plat de 300 ohms, remplacer ce câble par un câble de type coaxial.

Si ces mesures ne donnent pas les résultats escomptés, prière de contacter le détaillant local autorisé à commercialiser ce type de produit. Si ce n'est pas possible, prière de contacter Yamaha Electronics Corp., États-Unis, 6660 Orangethorpe Ave., Buena Park, CA 90620.
Les déclarations précédentes NE concernent QUE les produits commercialisés par Yamaha Corporation of America ou ses filiales.

INFORMATIONS CONCERNANT LA CONFORMITÉ

Cet appareil est conforme à l'article 15 de la Réglementation FCC.
Son fonctionnement est soumis aux deux conditions suivantes:
1) cet appareil ne doit pas causer d'interférences pernicieuses, et
2) cet appareil doit accepter toutes les interférences, y compris les interférences pouvant lui causer un fonctionnement indésirable.

Se reporter au mode d'emploi si des interférences semblent perturber la réception radio.

Warranty policy for European Economic Area (EEA) and Switzerland, Australia customer

In the unlikely event that your Yamaha product needs guarantee service, please contact the dealer from whom it was purchased. If you experience any difficulty, please contact Yamaha representative office in your country. You can find full details on our website EEA and Switzerland: (http://www.yamaha-hifi.com/ or http://www.yamaha-uk.com/ for U.K. resident).
Australia: (http://www.yamahamusic.com.au/)

Information for Users on Collection and Disposal of Old Equipment

This symbol specified in the Directives 2002/96/EC indicates that used electrical and electronic products should not be mixed with general household waste.
For proper treatment to avoid harmful effect on human health and environment, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Conditions de garantie pour la Communauté économique européenne (CEE) et la Suisse

Si votre produit Yamaha a besoin d'une réparation pendant sa période de garantie, veuillez contacter votre revendeur. En cas de difficulté, veuillez contacter le représentant Yamaha de votre pays. Vous trouverez toutes les informations nécessaires sur notre site Web (CEE et Suisse) à l'adresse suivante : (http://www. yamaha-hifi .com/ ou http://www.yamaha-uk.com/ pour les résidents au Royaume-Uni)

Information concernant la Collecte et le Traitement des piles Usagées et des déchets d'équipements électriques et électroniques

Ce symbole, spécifié dans la Directive 2002/96/CE, signifie que les produits électriques ou électroniques usagés ne doivent pas être mis au rebut avec les déchets ménagers. Pour traiter ces équipements de manière appropriée, et éviter ainsi les effets néfastes sur la santé humaine et sur l'environnement, contactez votre municipalité, votre service de traitement des déchets ou le point de vente où vous avez acheté les produits.

Garantieanwendung für den Europäischen Wirtschaftsraum (EWR) und Schweiz

Falls Sie im unwahrscheinlichen Fall für Ihr Yamaha-Produkt eine Garantie-Dienstleistung in Anspruch nehmen müssen, kontaktieren Sie bitte den Händler, bei dem Sie das Produkt gekauft haben. Sollten dabei Schwierigkeiten auftreten, bitte den Yamaha-Importeur Ihres Landes benachrichtigen. Sie können die gesamten Informationen auf unserer Webseite EWR und Schweiz finden: (http:// www.yamaha-hifi .com/ oder http://www.yamaha-uk.com/ für britische Staatsbürger)

Verbraucherinformation zur Sammlung und Entsorgung alter Elektrogeräte und Benutzter Batterien

Dieses Symbol, das in den Richtlinien 2002/96/EC spezifiziert wird, gibt an, dass elektrische und elektronische Produkte nicht im allgemeinen Hausmüll entsorgt werden dürfen. Für Einzelheiten zur korrekten Entsorgung, um schädliche Wirkungen auf die menschliche Gesundheit und Umwelt zu vermeiden, bitte Ihre lokale Gemeinde-/ Stadtverwaltung, Ihr Abfallbeseitigungsunternehmen oder die Verkaufsstelle, wo Sie das Produkt erworben haben, kontaktieren.

Garantibestämmelser för EES-området och Schweiz, kunder i Australien

Om din Yamaha-produkt av någon oförutsedd anledning kräver garantiservice. Var god kontakta Yamahas representantkontor i ditt land, om något problem uppstår. Fullständig information återfinns på vår webbplats för EES och Schweiz: (http://www.yamaha-hifi.com/ eller http://www.yamaha-uk.com/ för boende i Storbritannien).
Australien: (http://www.yamahamusic.com.au/)

Användarinformation, beträffande insamling och dumpning av gammal utrustning

Denna symbol, som är specificerad i direktiven 2002/96/EC, talar om att de använda elektriska och elektroniska produkterna inte ska blandas med allmänt hushållsavfall. För rätt handhavande för att undvika skadliga effekter på mänsklig hälsa och miljö kontakta din lokala kommun, ditt sophanteringsföretag eller inköpsstället för dina varor.

Norme di garanzia per lo Spazio economico europeo (SEE) e la Svizzera

Nell'improbabile eventualità che il prodotto Yamaha richieda un intervento di assistenza in garanzia, rivolgersi al rivenditore presso cui il prodotto è stato acquistato. Se si dovessero incontrare difficoltà, rivolgersi al rappresentante Yamaha nel proprio paese. Per informazioni dettagliate consultare il sito Web per SEE e Svizzera: http://www.yamaha-hifi .com/ oppure http://www.yamaha-uk.com/ (per i residenti nel Regno Unito)

Informazioni per gli utenti sulla raccolta e lo smaltimento di vecchia attrezzatura e batterie Usate

Il presente simbolo, previsto dalla direttiva 2002/96/CE, indica che i prodotti elettrici ed elettronici usati non devono essere smaltiti con i rifiuti domestici. Per il corretto smaltimento al fine di prevenire effetti nocivi sulla salute e sull'ambiente, rivolgersi alle autorità locali, alla società di smaltimento dei rifiuti o al punto vendita presso cui i prodotti sono stati acquistati.

Condiciones de garantía para países del Espacio Económico Europeo (EEE) y Suiza

En el caso poco probable de que su producto Yamaha necesite una reparación cubierta por la garantía, póngase en contacto con el distribuidor en el que lo haya adquirido. Si tiene cualquier problema, póngase en contacto con la delegación de Yamaha de su país. Podrá encontrar más información en el sitio web para el EEE y Suiza (http://www.yamaha-hifi .com/ o http://www.yamaha-uk.com/ si reside en el Reino Unido).

Información para Usuarios sobre Recolección y Disposición de Equipamiento Viejo y Baterías Usadas

Este símbolo de las Directivas 2002/96/CE indica que los productos eléctricos y electrónicos utilizados no deben mezclarse con residuos domésticos generales. Para conocer el tratamiento correcto para evitar perjudicar la salud humana y el medio ambiente, póngase en contacto con su ayuntamiento, el servicio de recogida de residuos de su municipio o el establecimiento en el que compró el producto.

Garantiebeleid voor de Europese Economische Ruimte (EER) en Zwitserland

Mocht het voorvallen dat uw Yamaha-product onder garantie moet worden hersteld, neemt u contact op met de verdeler waar u het product hebt gekocht. Als u hierbij moeilijkheden ondervindt, neemt u contact op met de Yamahaverantwoordelijke voor uw land. Meer informatie vindt u op onze website voor EER en Zwitserland (http://www.yamaha-hifi .com/ of http://www.yamaha-uk.com/ voor inwoners van het VK)

Informatie voor gebruikers van inzameling en verwijdering van oude apparaten en Gebruikte batterijen

Dit symbool dat wordt gespecificeerd in richtlijn 2002/96/EG wijst erop dat gebruikte elektrische en elektronische voorwerpen niet mogen worden behandeld als huishoudelijk afval. Voor meer informatie over het correct verwerken van afval en het vermijden van schadelijke gevolgen voor mens en milieu, neemt u contact op met de lokale gemeentelijke instanties, het afvalverwerkingsbedrijf in uw buurt of het verkoopspunt waar u het product hebt gekocht.

Информация для пользователей по сбору и утилизации старой аппаратуры и Использованных батареек

Этот символ, указанный в Директивах 2002/96/EC, означает, что используемые электрические и электронные изделия необходимо утилизировать отдельно от остальных бытовых отходов. Для получения дополнительной информации о правильном обращении с изделиями с целью предотвращения вредного влияния на здоровье человека и окружающую среду обратитесь в местные муниципальные органы, службу сбора отходов и по месту приобретения данных изделий.

■ Precautions

Read this before using this unit.

- To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- Install this unit in a cool, dry, clean place away from windows, heat sources, and sources of excessive vibration, dust, moisture and cold. Avoid sources of humming (transformers, motors, etc.). To prevent fire or electrical shock, do not expose this unit to rain or water.
- To prevent the enclosure from warping or discoloring, do not place this unit where it will be exposed to direct sunlight or excessive humidity.
- Do not place this unit where foreign objects such as water drips may fall. It may cause a fire, or damage to this unit.
- Do not attempt to clean this unit with chemical solvents as this may damage the finish. Use a clean, dry cloth.
- Do not attempt to modify or fix this unit. Contact qualified Yamaha service personnel when any service is needed. The cabinet should never be opened for any reasons.

Secure placement or installation is the owner's responsibility.
Yamaha shall not be liable for any accident caused by improper placement or installation of this unit.

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.
"Works with iPhone" means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.
Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

■ Introduction

With the Yamaha YDS-12 Universal Dock for iPod, you can play the content stored on your iPod through a Yamaha dock-compatible audio component. Operation and functionality depends on your iPod model and Yamaha dock-compatible audio component. See the owner's manuals supplied with your Yamaha dock-compatible audio component or iPod for details.
This unit is compatible with the iPod and iPhone. References in this manual to "iPod" also apply to the iPhone.
As of April 2010, the following iPod models are compatible with this unit:

- iPhone
- iPod touch
- iPod (4th Gen./5th Gen./Classic)
- iPod nano
- iPod mini

iPod™, iPhone™

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.
iPhone is a trademark of Apple Inc.

■ Package contents

Following items are included in the package. Make sure you have them all (iPod or iPhone not included).

YDS-12 (Main unit)

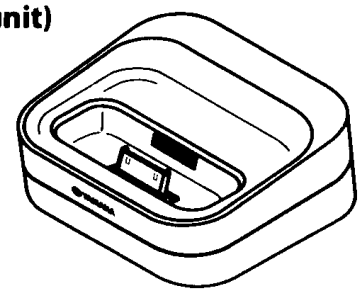

Dock cable (2 m(6.5 ft))

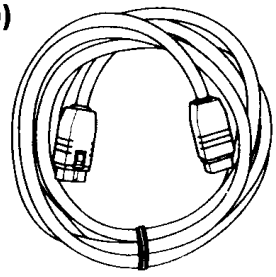

iPod dock adaptors (Ⓐ, Ⓑ, Ⓒ)

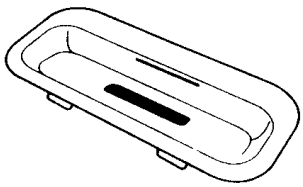

Ⓐ iPod with color display (20 GB or 30 GB) or U2 Special Edition

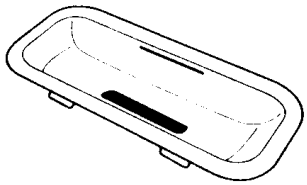

Ⓑ iPod with color display (40 GB or 60 GB) or iPod (40 GB)

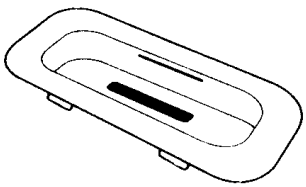

Ⓒ iPod mini (4 GB or 6 GB)

- The included iPod dock adaptors are for use with iPod models that do not come with their own adaptors.
- If your iPod came with its own adaptor, use it instead.
- Each adaptor has an identification letter (Ⓐ, Ⓑ, or Ⓒ) printed on its underside.
- A dock adaptor for the iPhone is not included. You'll need to use one separately.

■ Controls and functions

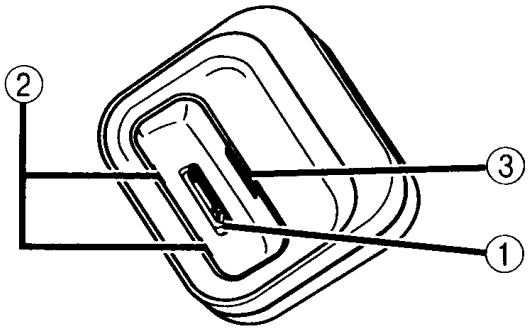

Upper side

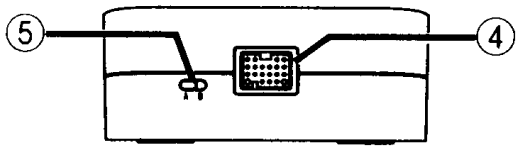

Back side

① **iPod connector terminal**
Connects your iPod.
② **Slits**
Hold an iPod dock adaptor.
③ **Adaptor holder**
Holds an iPod dock adaptor.
④ **Dock cable terminal**
Connects the supplied dock cable.
⑤ **Mode switch**
Selects the mode (A or B) depending on the Yamaha dock-compatible audio component you connect to this unit.
See next page for details.

■ Inserting an iPod dock adaptor

Insert the iPod dock adaptor supplied with your iPod into the slot of the main unit. Depending on the type of your iPod, you may need to insert one of the iPod dock adaptors supplied with this unit. See page 1 for details about the iPod dock adaptor.

1. Insert the stoppers of the iPod dock adaptor into the slits on the slot of this unit.

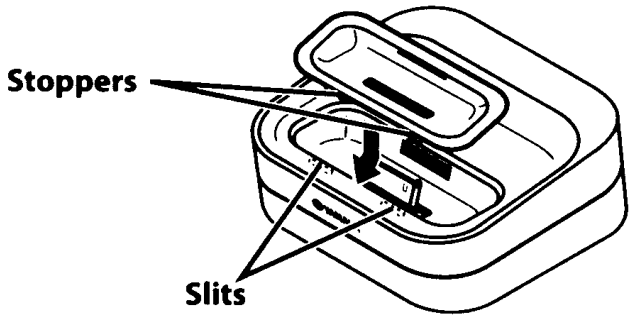

2. Insert the iPod dock adaptor until it snaps into the slot of this unit.

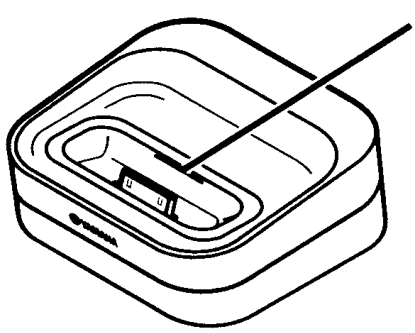

When you remove the iPod dock adaptor from this unit, insert one of your finger nails into the slit on the iPod dock adaptor and pull it up.

■ Connecting the dock

1. Set the Mode switch to A (default). If you're using a Yamaha dock-compatible audio component that's listed in the Appendix at the end of this manual, set the Mode switch to B.

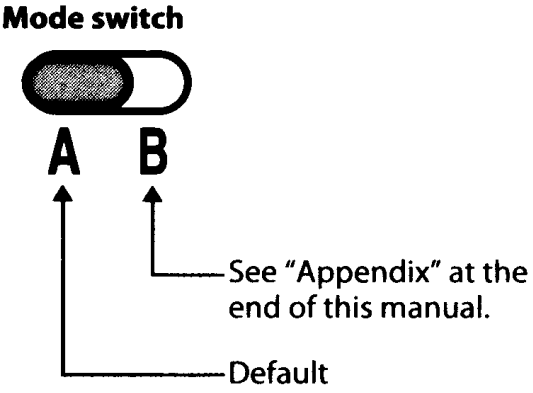

2. Connect one of the plugs of the dock cable to the dock cable terminal of this unit firmly.

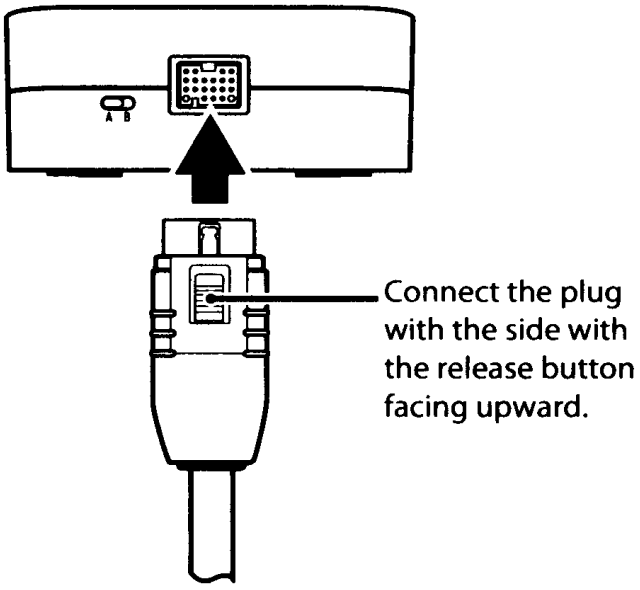

3. Make sure the power of the dock-compatible audio component is turned off.

Note

Connecting the dock connection cable while the dock-compatible audio component's power is on could result in damage.

4. Connect the other plug of the dock cable to the DOCK jack of the dock-compatible audio component.

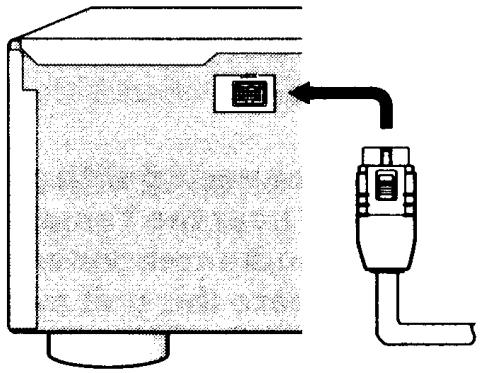

Note

Be sure to connect the plugs of the dock cable firmly to both the dock cable terminal of this unit and the DOCK jack of the dock-compatible audio component. When the connection is loose, this unit may output some unwanted noise.

■ Connecting your iPod

Insert the dock connector port of your iPod into the iPod connector terminal of this unit firmly.

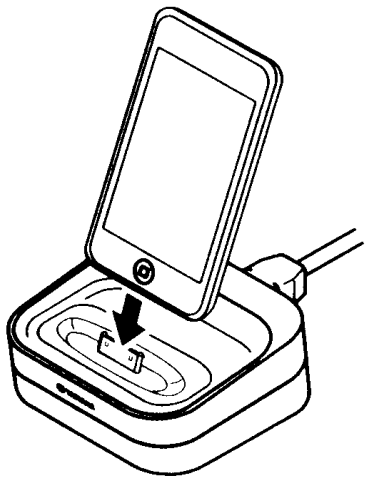

Refer to the owner's manual supplied with your Yamaha dock-compatible audio component or iPod for operating information.

Note

- **When this unit is connected with an iPhone and placed near the Yamaha dock-compatible audio component, noise may occur. Place this unit away from the Yamaha dock-compatible audio component.**
- **Make sure that the output level of the dock-compatible audio component is set to minimum.**
- To protect the dock connector from damage, do not twist or sway back and forth your iPod when inserting or taking it off from this unit, and be careful not to knock over this unit when your iPod is inserted.
- Always use the correct iPod dock adaptor (this may be the one supplied with your iPod, one supplied with this unit, or a commercially available adaptor). Using this unit with the wrong iPod dock adaptor may result in a poor connection and malfunction.
- Do not take off your iPod from this unit when you play back the music, photo, or movie stored on your iPod with the dock-compatible audio component.
- Connect your iPod without any other iPod accessories (such as headphones, a wired remote control, an FM transmitter etc.) connected.
- It is recommended that you update your iPod software before using it with this unit.
- If you set the Mode switch to B and insert your iPhone, an alert message appears on the iPhone screen. Select "No" on the screen to proceed.

■ Disconnecting the dock cable

1. **Make sure the power of the dock-compatible audio component is turned off.**

2. **Press and hold the release button and then pull off the plug of the dock cable.**

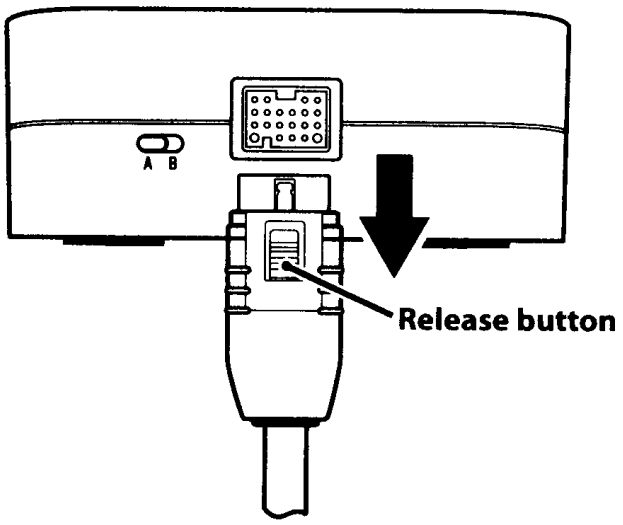

Note

Disconnecting the dock connection cable while the dock-compatible audio component's power is on could result in damage.

■ Troubleshooting

Refer to the items listed below when this unit does not function properly.

- Make sure the Mode switch is set appropriately for the Yamaha dock-compatible audio component you've connected to the YDS-12.
- Connect your iPod to this unit firmly.
- Connect the dock cable to the dock-compatible audio component firmly.
- Connect the dock cable to this unit firmly.
- Update the software of your iPod to the latest version.

If the instructions above do not help, refer to the instructions of your iPod or dock-compatible audio component.

■ Specifications

Dimensions (W x H x D) ..... 89 x 37 x 86 mm
(3 1/2 x 1 1/2 x 3 3/8 in)
Weight 160g
(5.6 oz)

* Specifications are subject to change without notice.

Appendix: Components that require the Mode switch set to B
Appendice: Eléments pour lesquels le sélecteur de mode doit être réglé sur "B"
Anhang: Geräte, für die der Moduswahlschalter auf „B" gestellt werden muss
Bilagan: Komponenter som kräver att Lägesväljaren ställs till B
Appendice: Dispositivi che richiedono di impostare l'interruttore della modalità su "B"
Apéndice: Componentes que requieren el conmutador Mode ajustado a B
Appendix: Apparaten waarvoor de modeschakelaar op "B" moet worden gezet
Приложение:Компоненты, для которых требуется устанавливать переключатель режимов в положение B
附录：需要模式开关设定为B的组件
부록 : 모드 스위치를 B 로 설정할 필요가 있는 컴포넌트
付録：モードスイッチを B に設定する機器

AX-V1065/V765/V565/V465
DSP-Z11/Z7
DSP-AX3900/AX3800/AX2700/AX1900/AX1800/AX1700
DSP-AX863/AX863SE/AX763/AX563/AX463
DSP-AX861/AX861SE/AX761/AX461
DSP-AX559/N600
RX-Z11/Z7
RX-V3900/V3800/V2700/V1900/V1800/V1700
RX-V2065/V1065/V765/V665/V565/V465/V365
RX-V863/V663/V563/V463/V363
RX-V861/V661/V461/V461DAB
RX-V659/V559/N600
HTR-6295/6290/6280/6270/6260/6250/6240/6230
HTR-6190/6180/6160/6150/6140/6130
HTR-6090/6080/6060/6050/6040
HTR-5960/5950/N5060

DVX-700
DRX-730
MCX-A300/P200
RX-E810/E410
YAS-81/71/70
YHT-S400/S350/S300
YMC-500/700
YSP-4000/3050/3000
YSP-40D/30D

- Some models are not available in certain regions or countries.
- Certains modèles ne sont pas disponibles dans certaines régions ou certains pays.
- Es sind nicht alle Modelle in allen Regionen und Ländern verfügbar.
- En del modeller är inte tillgängliga i vissa regioner eller länder.
- Alcuni modelli non sono disponibili in certe regioni o paesi.
- Algunos modelos no están disponibles en algunas regiones o países.
- Sommige modellen zijn niet verkrijgbaar in bepaalde regio's of landen.
- Некоторых моделей нет в наличии в определенных регионах или странах.
- 有些型号在某些地区或国家不可用。
- 일부 모델의 경우에는 특정 지역이나 국가에서 구입할 수 없습니다 .
- 地域により販売されていない機器があります。

©2010 Yamaha Corporation

YAMAHA CORPORATION
Printed in China WU92840-1

YAMAHA Home Audio products are designed and manufactured to provide a high level of trouble-free performance. YAMAHA Electronics Corporation, USA, is proud of the experienced craftsmanship that goes into each and every YAMAHA Home Audio product. YAMAHA sells its Home Audio products only through a network of high quality, specially authorized dealers and is pleased to offer the following Limited Warranty, which applies only to products purchased from our authorized dealers. YAMAHA Home Audio products are backed by a nationwide network of high quality YAMAHA Authorized Service Centers, providing prompt, courteous, and professional service. We suggest that you read the Limited Warranty thoroughly, and invite you to contact your authorized YAMAHA dealer or the YAMAHA Electronics Corporation, USA, Service Department if you have any questions.

YAMAHA

LIMITED WARRANTY

HOME AUDIO PRODUCTS

Type of Product	Duration of Warranty (beginning from first consumer purchase)
A/V and Stereo Receivers, Processor and Integrated Amplifiers, Separate Amplifiers and Preamplifiers, Tuners, CD Players and Changers, HDD Players and Recorders, Powered Loudspeakers, Media Controllers and Speaker Systems purchased individually, as a pair, or as part of an Integrated or Packaged system.	2 years
Cassette Decks, BLU-RAY Disc Players, DVD Players and Changers, Integrated Systems (Receiver or Amplifier combined or on same chassis with CD or DVD Player), Desktop Audio Systems (i.e. TSX and PDX Series), Multimedia Speakers and Accessories.	1 year

What is Covered and what is Not Covered:

This warranty covers all defects in materials or workmanship in this product, but DOES NOT COVER the following:

(1) Damage, deterioration or malfunction resulting from:
   a. Accident, negligence, misuse, abuse, improper installation or operation or failure to follow instructions contained in your Owner's Manual.
   b. Any shipment of the product. (Claims must be presented to the carrier.)
   c. Repair or attempted repair by anyone other than YAMAHA or an authorized YAMAHA Service Center.

(2) Any unit which has been altered or on which the serial number has been defaced, modified or removed.

(3) Normal wear, battery replacement and any periodic maintenance.

(4) Any unit which has not been purchased from an authorized YAMAHA Home Audio dealer in the USA. If you are uncertain as to whether a dealer has been authorized by YAMAHA, please contact YAMAHA's Service Department.

(5) Any unit used for industrial or commercial purposes.

Who may enforce the warranty:

This warranty is enforceable only by the original purchaser.

What we will pay for and what you must pay for:

YAMAHA will repair or replace units covered by this warranty, without charge to the consumer for labor or materials. Some repair parts may be used or rebuilt replacements, that meet or exceed Yamaha specifications for new parts, in exchange for defective parts. YOU ARE RESPONSIBLE FOR ANY INSTALLATION OR REMOVAL CHARGES AND FOR ANY INITIAL SHIPPING CHARGES, if the product(s) must be shipped for warranty service. However, we will pay the return shipping charges to any destination within the USA if the repairs are covered by the warranty.

How you can get Warranty Service:

(1) If your YAMAHA product(s) require service, contact the authorized YAMAHA dealer and the dealer will advise you of the procedures to be followed. If this is not practical, contact YAMAHA at the address, telephone number or Internet URL shown below. We may request that you send the defective product(s) to a local authorized YAMAHA Service Center, to an authorized YAMAHA Regional Service Center, or authorize return of the defective product(s) to YAMAHA for repair.

(2) Product(s) shipped for service should be packed securely and must be accompanied by a detailed explanation of the problem(s) requiring service, as well as your sales receipt or other proof of date and place of purchase, as evidence of warranty coverage.

(3) Warranty registration is not required for warranty coverage.

Limitation of Implied Warranties:

ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE LENGTH OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

Exclusion of Damages:

YAMAHA'S LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT, AT OUR OPTION. IF WE ELECT TO REPLACE THE PRODUCT, THE REPLACEMENT MAY BE A RECONDITIONED UNIT. YAMAHA SHALL NOT BE LIABLE FOR DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE, DAMAGE TO ANY OTHER EQUIPMENT OR OTHER ITEMS AT THE SITE OF USE, OR ANY OTHER DAMAGES WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Should you have any questions about service received or if you need assistance in locating an authorized YAMAHA Service Center, please contact:

YAMAHA

SERVICE DEPARTMENT

YAMAHA Electronics Corporation, USA

6660 Orangethorpe Avenue, Buena Park, California 90620-1345
Telephone: (800) 292-2982, 8 AM to 4 PM Pacific time
Internet URL: http://www.yamaha.com/yec/

Do not return any product to the above address; it is not a service location. YAMAHA products are backed by a nationwide network of high quality YAMAHA authorized Service Centers, providing prompt, courteous and professional service. **For referral to your nearest authorized YAMAHA Preferred Customer Service Center or authorized YAMAHA Regional Service Center call 1-800-4 YAMAHA.**